





Functional Devices, Inc. • p: 800.888.5538 • f: 765.883.7505 • www.functionaldevices.com • sales@functionaldevices.com

RIBXG Series

Enclosed Split Core AC Sensors

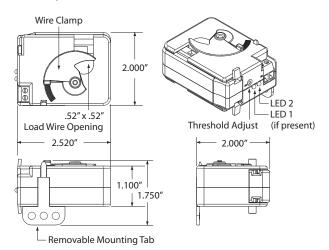

AC Sensors Low-Voltage-Switching

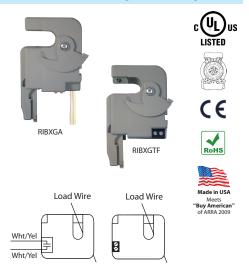

Specifications

Operating Temperature: -30 to 140° F

Humidity Range: 5 to 95% (noncondensing)

Max Sense Voltage: 600 Vac

Approvals: UL Listed, UL916, UL864, C-UL, California State Fire Marshal, CE, RoHS

Mounting/Installation: Removable mounting tab provided.

The wire clamp locks against the load wire, securing the unit in place.

Sensor Output: Current below threshold: Open


Current above threshold: Closed

Sensor Output:

- Solid State Contact
- 30 Vac/dc, .4 Amp Max.
- · When current sensor status is off (open), leakage <30 uA @ 30Vac/dc
- When current sensor status is on (closed), voltage drop
- < .3 Vac/dc @ .1 Amp < 1.6 Vac/dc @ .4 Amp



Self-Calibrating AC Sensors (Models with -SCAL Suffix)

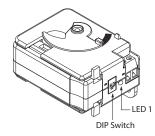

-SCAL LED Table				
LED Off	No Current			
Two Winks	Current Below Range			
Three Winks	Current In Range			
Four Winks	Current Above Range			
Continuous Winks	Calibration in Progress			

The SCAL unit begins the 30 second self-calibration process the first time current is applied in the operating range. The threshold is permanently set. Subsequent calibrations may be performed by moving SW1 to the position opposite of its current position with or without current applied (hands can be safely away from live voltage). Once current begins flowing, or if it already is, the calibration process will begin. At the end of the 30 seconds, amperage will be read and set as the threshold. SW2 in the ON position provides a 15% (+/-3%) differential, in the OFF position it provides a 25% (+/-3%) differential. SW2 can be selected at anytime and does not affect the threshold setting. Current in-range closes the status contacts. Current above or below range opens the status contacts. Ex. With a current of 10 amps set as the threshold and a 15% differential, status contacts will be closed between 8.5 amps and 11.5 amps and open outside of this range. A small amount of hysteresis is provided to prevent dithering near the differential limits.













RIBXG Series Selection Guide							
Model#	Range	Type	Threshold	Sensor Output	LED 1	LED 2	
RIBXGF	.35-150 Amp	Split Core	Fixed, .35 Amp	Solid State Switch SPST; 30 Vac/dc; .4 Amps Max (Wht/Yel 16" 18 AWG Wire Leads)			
RIBXGFL*	.75-150 Amp	Split Core	Fixed, .75 Amp	Solid State Switch SPST; 30 Vac/dc; .4 Amps Max (Wht/Yel 16" 18 AWG Wire Leads)	Over Trip Point		
RIBXGTF	.35-150 Amp	Split Core	Fixed, .35 Amp	Solid State Switch SPST; 30 Vac/dc; .4 Amps Max (Terminal Strip, Accepts #14-22 AWG Wire)			
RIBXGTFL*	.75-150 Amp	Split Core	Fixed, .75 Amp	Solid State Switch SPST; 30 Vac/dc; .4 Amps Max (Terminal Strip, Accepts #14-22 AWG Wire)	Over Trip Point		
RIBXGA	.75-150 Amp	Split Core	Adjustable	Solid State Switch SPST; 30 Vac/dc; .4 Amps Max (Wht/Yel 16" 18 AWG Wire Leads)	Over Trip Point	Under Trip Point	
RIBXGTA	.75-150 Amp	Split Core	Adjustable	Solid State Switch SPST; 30 Vac/dc; .4 Amps Max (Terminal Strip, Accepts #14-22 AWG Wire)	Over Trip Point	Under Trip Point	
RIBXGA-SCAL	3-150 Amp	Split Core	Self-Cal.	Solid State Switch SPST; 30 Vac/dc; .4 Amps Max (Wht/Yel 16" 18 AWG Wire Leads)	See -SCAL Table		
RIBXGTA-SCAL	3-150 Amp	Split Core	Self-Cal.	Solid State Switch SPST; 30 Vac/dc; .4 Amps Max (Terminal Strip, Accepts #14-22 AWG Wire)	See -SCAL Table		

^{* =} Not approved by California State Fire Marshal