

### **Technical Instructions**


Document No. 155-068P25

TH 193-4

Rev. 2, December, 2001

## **SIEMENS**Powers Controls

### Free Energy Band<sup>™</sup> TH 193 HC Heating/Cooling Room Thermostat

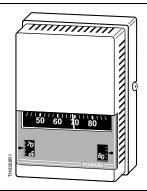

### Description

The TH 193 HC thermostats are proportional dual output, dual set point, two-pipe (dual one-pipe, low air capacity) or three-pipe (dual two-pipe, high air capacity) sensor controllers. Each thermostat includes a wall mounting plate for installation in a variety of rough-in terminal boxes. Sensitive bimetals respond to temperature changes to modulate control air through a flapper nozzle. As the heating load decreases due to internal heat gains, a dead band of control minimizes energy consumption while the set point changes from 72°F (22°C) heating mode to 78°F (26°C) cooling mode. Two set point dials allow adjustment of the dead band 4°F (2°C) minimum. Air connections are made with 5/32-inch (4 mm) O.D. plastic tubing, directly to the thermostat chassis for retrofit applications or with plug-in adapters (provided with the TH 192 rough-in terminal box or optional accessories), which slide into the wall mounting plate.

#### **Features**

- Direct and reverse acting for heating and cooling modes
- Two separate adjustable temperature set point indicating dials
- Two highly sensitive bimetal thermostatic elements
- Fahrenheit or Celsius models
- Individual field adjustable sensitivity with graduated scale
- Integral field adjustable limit stops
- Control pressure test port accessible without removing cover
- Easily replaceable thermometer, set point dials, filters and restrictor plate
- Covers available for concealed or exposed thermometers and for either concealed, key, or exposed knob adjustment and set point indication
- Standard plastic thermostat covers provide desert beige or white finish

### Optional Design Features

- Fixed temperature limit stops meet government specifications
- Metal covers available in standard configurations with a variety of finishes
- Competitor adapter mounting kits available
- All thermostat chassis available with optional 1/2-inch set point adjustment knobs

### **Application**

TH 193 HC thermostats control space temperature and take advantage of the dead band to "float" room temperature between heating and cooling modes while maintaining energy management (maximum economy) and occupancy comfort. TH 193 HC thermostats control valve and damper actuators in building applications that require early morning heat and afternoon cooling.

Use TH 193 HC two-pipe (dual one-pipe) thermostats with external restrictors (20 scim, 5.4 ml/sec) where a limited air capacity operates a single valve and/or actuator. Use TH 193 HC three-pipe (dual two-pipe) thermostats where multiple valves and actuators, used with or without high/low limiting controls, require higher air capacities. The thermostats are available with covers that conceal or expose the set point adjustment dials.

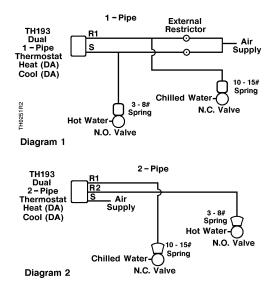


Figure 1. Typical TH 193 HC Thermostat Application.






Figure 2. TH 193 HC Thermostat Dual One-Pipe Connections.

Figure 3. TH 193 HC Thermostat Dual Two-Pipe Connections.

## Product Numbers and Ordering Information

#### Chassis

See Table 1 for product number and ordering information on TH 193 HC thermostat chassis.

- 1. Does application require one-pipe or two-pipe connection?
  - a. One-pipe thermostats are low air capacity devices and have only one port connection (R1). This application requires an external restrictor.
  - b. Two-pipe thermostats are high air capacity devices for controlling two or more terminal devices such as damper actuators or valves. This application requires two port connections: supply (S) and return (R1).
- 2. Is a Fahrenheit or Celsius scale required?
- 3. Is the heating control direct or reverse acting?
- 4. Is the cooling control direct or reverse acting?
- 4. Where is set point adjustment knob located?
  - a. Adjustment knob located at bottom of chassis.
  - b. Adjustment knob on front with 1/2-inch exposed knob.

Table 1. TH 193 HC Thermostat Chassis Part Numbers.

Chassis with Wall Plate					
Connection	Set Point Adjustment	Fahrenheit		Celsius	
Туре		Heating DA	Heating RA	Heating DA	Heating RA
One-Pipe Relay	Exposed at Bottom of Cover	Cooling DA 193-211	Cooling DA 193-213	Cooling DA 193-231	Cooling DA 193-233
		Cooling RA 193-212	Cooling RA 193-214	Cooling RA 193-232	Cooling RA 193-234
	Exposed 1/2" Knob on Cover *	Cooling DA 193-211K	Cooling DA 193-213K	Cooling DA 193-231K	Cooling DA 193-233K
		Cooling RA 193-212K	Cooling RA 193-214K	Cooling RA 193-232K	Cooling RA 193-234K
Two-Pipe Relay	Exposed at Bottom of Cover	Cooling DA 193-215	Cooling DA 193-217	Cooling DA 193-235	Cooling DA 193-237
		Cooling RA 193-216	Cooling RA 193-218	Cooling RA 193-236	Cooling RA 193-238
	Exposed 1/2" Knob on Cover *	Cooling DA 193-215K	Cooling DA 193-217K	Cooling DA 193-235K	Cooling DA 193-237K
		Cooling RA 193-216K	Cooling RA 193-218K	Cooling RA 193-236K	Cooling RA 193-238K

<sup>\*</sup> This feature requires a key set point adjustment cover (or key type cover). See Table 2.

### **Covers**


See Table 2 for product number and ordering information on TH 193 HC thermostat covers.

- 1. Is the set point adjustment exposed for customer adjustment or concealed to prevent alteration of setting?
- 2. Is the thermometer exposed or concealed?
- 3. Is the set point indication exposed or concealed behind cover?
- 4. Is a plastic or zinc cast metal cover required?
  - a. Plastic covers order 192-2XX.
  - b. Metal covers order 192-3XX.
- 5. Is finish of cover standard or optional?
  - a. Standard cover is plastic, desert beige color.
     For white plastic cover option, add "W" suffix code to cover part number (e.g., 192-256W).
  - Optional covers are plastic or metal and available in a variety of colors. See Table 3.

	Cover Configuration		Cover Part Number <sup>2</sup>		
Set Point Adjustment	Thermometer	Set Point Indicator	Standard Plastic Cover	Standard Metal Cover	
Concealed	Concealed	Concealed	192-256	192-356	
	Exposed		192-254	192-354	
Key <sup>1</sup>	Concealed	Exposed	192-267	192-367	
	Exposed		192-268	192-368	
Exposed	Concealed		192-258	192-358	
	Exposed		192-260	192-360	

Table 2. TH 193 HC Thermostat Cover Part Numbers.

- 1 Key set point adjustment cover is required for all thermostat chassis with optional 1/2-inch set point adjustment knobs.
- To order an optional thermostat cover finish, add the appropriate suffix letter listed in Table 3 to the end of the part number listed in Table 2.

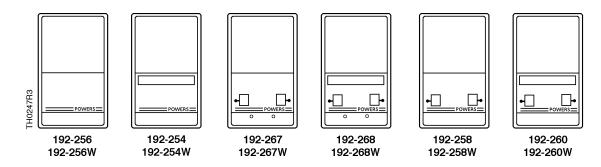

Technical Instructions Document Number 155-068P25 Rev. 2, December, 2001

### Table 3. TH 193 HC Thermostat Suffix Letters for Optional Cover Part Numbers.

**NOTE:** For color samples, order color reference guide P/N 152-178P10.

Part Number Suffix Letter	Cover Material	Cover Finish	Part Number Suffix Letter	Cover Material	Cover Finish
None	Plastic (standard)	Desert Beige	D	Metal (optional)	No. 10 Special Bronze
W	Plastic (optional)	White	E		Brushed Electro-plated Satin Chrome
None	Metal (standard)	Desert Beige	F		Sierra Gold
А	Metal (optional)	No. 1 Silver	G		Brushed Aluminum
В		No. 5 Satin Chrome	Н		White
С		No. 7 Light Statuary Bronze			

Specifications	Control action	See Table 1
opecinications	Operating ranges	45°F to 85°F (7°C to 30°C)
	Supply air pressure, maximum	30 psi (207 kPa)
	Normal air supply pressure	18 to 25 psi (124 to 172 kPa)
	Sensitivity adjustment	1 to 4 psi/°F (12 to 50 kPa/°C)
	Nominal air consumption	
	One-pipe Two-pipe	25 scim (6.8 ml/sec) per side 230 scim (63 ml/sec) per side
	Temperature response	0.1°F (0.06°C)
	Temperature	
	Storage temperature  Ambient operating temperature	-10°C to 140°F (-23°C to 60°C) 40°F to 140°F (4°C to 60°C)
	Dial graduations	2°F (1°C)
	Factory settings	
	Calibration @ 72°F (22°C) Sensitivity Limit stop adjustment	7.5 psi (52 kPa) 2.5 psi/°F (31 kPa/°C) 45°F and 85°F (7°C and 30°C)
	Standard cover	Cycolac, desert beige
	Shipping weight	0.7 lbs. (0.3 kg)
	Dimensions	See Figure 10

#### **Accessories**

See the following Technical Bulletins for information on accessories:

Technical Bulletin	<b>Document Number</b>
TB 237 Terminal Kits	155-244P25
TB 214 Adapter Kits	155-231P25
TB 193 Guard Kit	155-222P25
TB 241 Test Head Kit	155-255P25
TB 167 Restrictors	155-213

### Operation

The TH 193 HC thermostat is a two-temperature thermostat with two separate outputs. In direct acting control, an increase in temperature increases the control air pressure and a decrease in temperature decreases the control pressure. In reverse acting control, an increase in temperature decreases the control air pressure and a decrease in temperature increases the control pressure.

The TH 193 HC provides two separate bimetal elements; one for heating mode and the other for cooling mode. The set point of the two elements determines the window of the dead band. A 4°F (2°C) minimum dead band is standard, where the heating mode set point is 72°F (22°C) and the cooling mode set point is 78°F (26°C). Figure 4 shows a typical application with set points adjusted for a 6°F (4°C) dead band.

Figure 5 shows direct acting TH 193 HC output characteristics. As heating increases, the output pressure increases from 0 to 15 psi (0 to 103 kPa). A field adjustable dead band occurs. When the dead band elapses, cooling occurs from 0 to 15 psi (0 to 103 kPa).

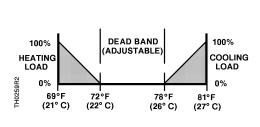


Figure 4. TH 193 HC Operating Characteristics.

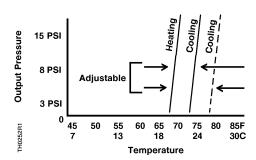


Figure 5. TH 193 HC Input/Output Characteristics.

### TH 193 HC Thermostat Details

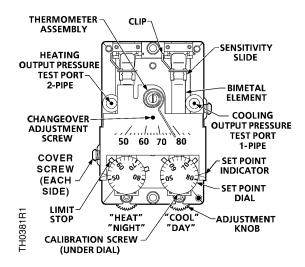


Figure 6. TH 193 HC Thermostat Details.

### Thermometer Calibration

- 1. Use a test thermometer to read the current room temperature.
- 2. Place a screwdriver in the center of the thermometer assembly (Figure 6). Carefully rotate thermometer assembly until pointer tip indicates the correct room temperature.

**NOTE:** Avoid breathing on or touching the bimetal spiral since this influences the temperature reading.

### Limit Stop Adjustment

Thermostat limit stops define the minimum and maximum thermostat set points. The limit stops engage in the set point cam gear teeth and cause interference between the set point cam gear and the adjustment knob gear.

To change limit stop settings, use needle nose pliers to pull limit stop between the set point cam gear teeth. Rotate limit stop to its new position. Do not pull limit stop any more than necessary to clear the gear teeth. Changing the limit stop position one gear tooth changes the limit stop setting by 1-1/3°F (0.7°C).

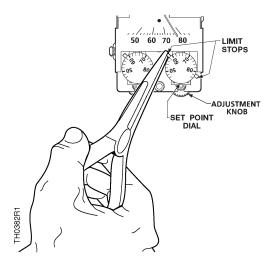


Figure 7. TH 193 HC Limit Stop Adjustments.

### Sensitivity Adjustment

To change thermostat sensitivity, use a flat-blade screwdriver to carefully move the sensitivity slide to the desired position as follows:

Graduation
closest to the
rigid end of
the bimetal
element
4 psi/°F
(50 kPa/°C)

Graduation
closest to the
minimum
(MIN) end of
the bimetal
element
1 psi/°F
(12 kPa/°C)

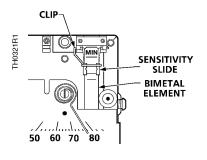



Figure 8. TH 193 HC Sensitivity Adjustment.

**NOTE:** If the thermostat sensitivity is adjusted, the thermostat must be recalibrated.


### Thermostat Calibration

The thermostat is factory-calibrated to a control pressure of 7.5 psi (52 kPa) when the set point and the ambient temperature are both at 72°F (22°C). The factory sensitivity setting is approximately 2.5 psi/°F (31 kPa/°C). No adjustments are required if these settings are appropriate for the application. If the thermostat has been tampered with, the sensitivity changed, or is out of adjustment, use the following steps to recalibrate the instrument.


### **Cooling Calibration**

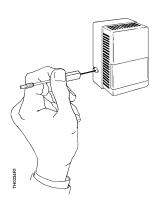


Step 1 — Remove cover using P/N 192-632 calibration tool. Verify room temperature is between 70°F and 80°F (2°C and 27°C).

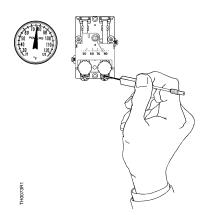

Step 2 — Verify that supply pressure is 18 to 25 psi (124 to 172 kPa). Set cooling dial to room temperature by turning the exposed adjustment knob or using a hex key as shown. Allow thermostat to stand for about five minutes to adjust to the new setting.

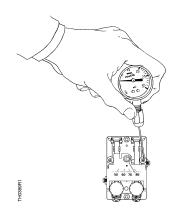




### Step 3 —

Moisten needle and insert P/N 192-633 test gauge and needle adapter in the test port. Read control pressure.

### Step 4 —


If control pressure does not read 7 to 8 psi (48 to 55 kPa), turn calibration screw using P/N 192-632 calibration tool or 1/8-inch (3.2 mm) wrench until pressure is 7 to 8 psi (48 to 55 kPa). The sensing element is now in calibration and the set point can be changed to the desired room temperature.

### **Heating Calibration**

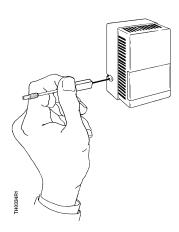


### Step 1 —


If not already done, remove cover using P/N 192-632 calibration tool. Verify room temperature is between 70°F and 80°F (21°C and 27°C).

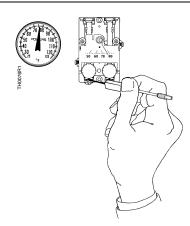

#### Step 2 —

Verify that supply pressure is 25 psi (172 kPa). Set heating dial to room temperature by turning the exposed adjustment knob or using a hex key as shown. Allow thermostat to stand for about five minutes to adjust to the new setting.

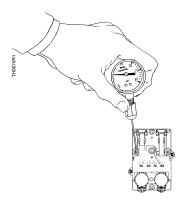



# Step 3 — Moisten needle and insert P/N 192-633 test gauge and needle adapter in the test port. Read control pressure.

### Step 4 —

If control pressure does not read 7 to 8 psi (48 to 55 kPa), turn calibration screw using P/N 192-632 calibration tool or 1/8-inch (3.2 mm) wrench until pressure is 7 to 8 psi (48 to 55 kPa). The sensing element is now in calibration and the set point can be changed to the desired room temperature.

### **Troubleshooting**

Before troubleshooting thermostat (see Table 4), make certain there is clean, dry supply air at 18 psi (124 kPa) minimum. Use test probe gauge and needle adapter to measure control pressure at thermostat test port.

The output pressure test port is accessible without removing the thermostat cover through the 8th opening from the top. For one-pipe thermostats, the port is on the *right* side. For two-pipe thermostats, the port is on the *left* side.

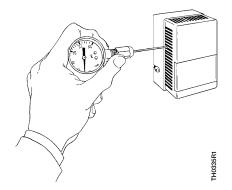


Figure 9. Accessing Output Pressure Test Port.



#### **CAUTION:**

If you use the wrong test port, thermostat damage can occur and result in replacement of the device.

Table 4. Troubleshooting Guide.

Problem	Check	Cause	Action
Control pressure	Air supply	Low supply pressure	As required
stays at approximately zero	Nozzle or flapper	Dirt on nozzle or flapper	Clean nozzle or replace thermostat
	Restrictor	Clogged restrictor	Replace restrictor
	Calibration	Out of calibration	Recalibrate
Control pressure stays at	Nozzle	Clogged nozzle	Clean nozzle or replace thermostat
approximately supply pressure	Calibration	Dirt on either supply or exhaust valve seat	Alternately close and open nozzle by gently pushing down the bimetal
Excessive air leakage from exhaust port on left side of thermostat	Supply and return line connection	Connections are interchanged or connection to port is incorrect	As required

### Chassis Tube Connector and Restrictor Plate Replacement

1. Remove thermostat chassis from wall. Terminal does not have a ball check valve.

**NOTE:** You must close off the supply air. For example, use a connector with the supply air terminal plugged.

- 2. Remove two Phillips head screws from connector on back of thermostat chassis. Pull connector out of recess. If necessary, pry connector loose with a screwdriver, but be careful not to damage restrictor plate and gasket.
- 3. Remove gasket from under connector. Remove restrictor. Remove second gasket from under restrictor.
- 4. Use restrictor replacement kit P/N 192-321 to replace gasket, restrictor, and second gasket.

**NOTE:** The restrictor plate is keyed to ensure proper orientation during installation.

- 5. Remove filters from existing connector and insert in new connector. Or, if filters are dirty, use restrictor replacement kit P/N 192-321 to replace filters.
- 6. Use chassis tube connector replacement kit P/N 192-525 to replace connector and mounting screws.

### **Service Parts**

The following chart lists accessory parts and tools available for thermostat service.

Description	Part Number
Dial thermometer (-40°F to 140°F, -40°C to 60°C) with pocket case	141-0573
Basic pneumatic calibration kit with thermometer, gauge, squeeze bulb, fittings, and case	832-177
Test head kit	832-179
Calibration tools	832-178
Test probe to check pressure with cover on	
Needle probe with 1-1/2" diameter gauge 0-30 psig (0-200 kPa) and calibration/cover wrench	192-633
Needle probe, no gauge (package of five)	192-759
1-1/2" diameter gauge, 0-200 kPa, back connected 1/8" NPT male	142-0344
1-1/2" diameter compound gauge, 0-30 psig/0-200 kPa, back connected 1/8" NPT male	142-0373
1-1/2" diameter compound gauge, 0-30 psig/0-200 kPa, bottom connected 1/8" NPT male. Replacement for use with 192-633	142-0426
Chassis tube connector replacement kit with mounting screws (material for 10 thermostats included)	192-525
Restrictor plate replacement kit with filters and gasket (material for 10 thermostats included)	192-321
Plug-in adapters for quick thermostat removal	
Straight, blue (package of 20)	192-485
Straight, white (package of 20)	192-486
Air link connects adapters for pressure tests (package of 20)	192-501
Compression ring (package of 100)	141-388
Elbow (provides quick return for wall surface mounting), blue (package of 20)	192-487
Elbow (provides quick return for wall surface mounting), white (package of 20)	192-488
20 scim (5.4 ml/sec) restrictors for one-pipe systems (package of 5). (1/4", 6.4 mm, O.D. plastic barb unless noted.)	
Brass coupling, 1/8" NPT (one only).	184-040
Coupling	184-116
Tee	184-113
Pre-piped dual tee for dual one-pipe systems	184-130

Desci	Part Number		
Replacement thermometer kits, b			
Scale Range	Thermos		
45°F to 85°F	50 60 70 80		192-775
10°C to 30°C			192-776
	Model 3	and Up	
45°F to 85°F	50 60 70 80		192-786
10°C to 30°C	50 60 70 80		192-785
	Models 1 and 2		
Replacement set point dials (pac	kages of 10)		
°F, Direct Acting	Right Side		192-779
°F, Reverse Acting		450	192-780
°C, Direct Acting	09		192-783
°C, Reverse Acting		QA102	192-784
°F, Direct Acting	Left Side	10160	192-777
°F, Reverse Acting		50-	192-778
°C, Direct Acting			192-781
°C, Reverse Acting			192-782

### **Dimensions**

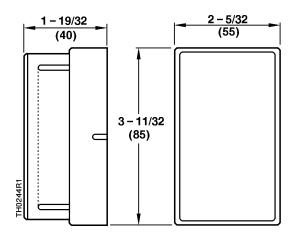


Figure 10. TH 193 HC Dimensions in Inches (Millimeters).

Information in this publication is based on current specifications. The company reserves the right to make changes in specifications and models as design improvements are introduced. **Free Energy Band** is a trademark of Siemens Building Technologies, Inc. Other product or company names mentioned herein may be the trademarks of their respective owners. © 2001 Siemens Building Technologies, Inc.